

## DD-5100 User Manual

**NOTE.** Each flat is delivered with an appropriate manufacturer PIN code – 1234. Change it, otherwise doors unlock code and new identifier programming function are unavailable.

### 1. How to use a door phone:

- ◆ For connection with a subscriber enter his/her flat number (from 1 to 9999) and press **ENTER** (otherwise call will be started automatically after 3 sec). Should a mistake appear or for canceling your call press **CANCEL**.
- ◆ Conversation starts upon subscriber's, whom you are calling to, answer. During the conversation the subscriber could unlock the doors using a button on audio handset.
- ◆ Door unlock delay time is programmed during system installation and does not depend on duration of pressing the unlock button.
- ◆ Unlock button functions only within a handset, the call was addresses to, and only in 2 sec after subscriber's answer.
- ◆ Duration of a call and a conversation is limited to 1 min and 2 min accordingly. After this term finishes, the system returns to duty mode.
- ◆ In case a door was unlocked with your PIN code, a handset will shortly peep 3 times.
- ◆ Handset's switch on/off button allow to switch the receiver off.

### 2. Entering a door unlock PIN code:

**IMPORTANT! If unchanged factory code, this feature will not be able to use**

Using the PIN, the subscriber can unlock the door from the outside:

1. Enter your apartment nu
2. Press key **\*** no later than 3 seconds. After dialing the apartment and will appear on the display 4 horizontal dashes.
3. Enter a 4 digit personal

Made a mistake, press **CANCEL** and let's start again. Everything done correctly the door will be unlocked.

### 3. Changing of user's PIN code:

**NOTE.** Each flat is delivered with an appropriate factory PIN code – 1234. Change it, otherwise doors unlock by code is unavailable.

For changing PIN code two persons are necessary: one staying outdoors near a outdoor panel, other – indoors by the handset.

1. Enter a flat number, press **ENTER** and wait till a person indoors answers.
2. Press and hold **↑**. A person indoors should press a door unlock button for three times (each second).
3. Four dashes will be shown on a display. Enter an old (or factory) PIN. And press **ENTER**
4. A word "PIN" flashes and four dashes are shown on a display. Enter a new PIN. And press **ENTER**

Everything done correctly, the PIN code will be changed. A mistake, press **CANCEL** and start again. 4. Programming of new identifiers

**NOTE.** This function is unavailable in case factory PIN code is not changed. The System will ask to change a factory code first and then programming of identifiers becomes available.

Two persons are necessary to program new identifiers: one staying outdoors near a call panel, other – indoors by a handset.

1. Enter a flat number, press **ENTER** and wait till a person indoors answers.
2. Press and hold **↓**. A person indoors should press a door unlock button for three times (each second).
3. Four dashes will be shown on a display. Enter PIN code. And press **ENTER**
4. A new key list number will be shown on a display. Attach a new identifier to the reader. It will be programmed. In case of attaching an old key, the system peeps two times without re-programming.

New keys are programmed individually. To program more keys, repeat this operation. A mistake, press **CANCEL** and start again.

# DIGITALAS

Ukmergės g. 234A, Vilnius, Tel: 2336619 [www.digitalas.lt](http://www.digitalas.lt)

Intercom wholesale and retail trade, manufacturing, installation, maintenance