
EB SERIES

EM Card Intelligent Cabinet Lock Operating Instructions

A. Initialization

Put batteries into the battery holder, press the re-set button until 1 beeps, red light flash,music sound,the lock is initialized.

After the initialization,all the cards canceled.

B. Owner Card

Program Owner Card:

After the linitialization, scan the first card,green light flash,music sound, the card is Owner card.

Owner Card Change:

Press the re-set button, scan a new card,the card will be new Owner card.

Note:

Only one owner card is allowed for each lock, but can be programmed the same Owner card for different EB Series lock. The Owner card is used to program or delete master Card(s) and can not be used to lock or unlock.

C. Management card

Program Management Card:

Scan owner card, music sound, red and green light flash 6 seconds, scan an card, music sound, red and green light flash,the card is Management card.

During light flash,can add 5 Management cards Max.

Delete Management Card:

Scan owner card, music sound, red and green light flash, scan the owner card, music sound, red and green light flash, scan the owner card,another music sound,light off,all Management cards canceled.All User cards canceled.

Management Card unlock:

Scan owner card, music sound, red and green light flash 6 seconds, red and green light flash 6 seconds,1 beeps,green light flash,unlock.

Note:

Management card is used to program or delete User Card(s) and can used to lock(unlock). Management card unlock the lock,User Card(s) be cancelled.

D. User Card

Program User Card:

Scan Management card, music sound, red and green light flash, scan Management card, music sound, red and green light flash, scan a new card, music sound, User card programmed succeed.

Delete User Card:

Scan Management card, music sound, red and green light flash 6 seconds, 1 beeps, green light flash, unlock, User card canceled.

User Card open the lock:

Scan User card, music sound, green light flash, unlock.

The lock will be locked after 3 seconds automatically.

E.Mode Switch

Switch to be One-time mode:

Swipe Management card, Music sound, Red + Blue lights on, Swipe owner card, Red + Blue lights flash fast, Swipe user card, music of unlocking(DO RE ME),lock switch to One-time mode.

ATTN: After switching to One-time mode,the lock will not be locked automatically.In the unlocked state,swipe any cards to locking it,after that, the card will be unlock card by default.

Switch to be standard mode:

Swipe Management card - Music sound, Red + Blue lights on, Swipe owner card,music of locking(ME RE DO),lock switch to standard mode.switch to standard mode.

Extra Functions:

Low Battery Alarm:

When operating voltage is on or below $DC3.0V \pm 0.2$, scan card to unlock, green light flash, and the lock emits continuous beeps alarm to show low voltage, the batteries must be replaced.

Emergency Unlocking

In case the batteries totally gone, connect a 9V power charger with the 2 external contacts on the lock, scan card to unlock.

Illegal Card Alarm

Scan illegal card more than 3 times, the lock emits beeps alarm for 20 seconds. During the alarm, use legal card to scan to terminate the alarm.

Locking Flashing light:

When the lock is locked, it will flash red light every 6 seconds,to show the lock is in use.